USER MANUAL

TECHNICAL SPECIFICATIONS

Model	**EFH330**
Max Heating Power	**1850W max**
Rated Frequency	**50Hz**
Rated Voltage	**220-240V ~**
Bulb Wattage	**25W/bulb (2 bulbs)**
Bulb Size & Type	**E14 candle**

WARRANTY

Arlec guarantees this product in accordance with the Australian Consumer Law.

Arlec also warrants to the original first purchaser of this product ("you") from a retailer that this product will be free of defects in materials and workmanship for a period of 12 months from the date of purchase; provided the product is not used other than for the purpose, or in a manner not within the scope of the recommendations and limitations, specified by Arlec, is new and not damaged at the time of purchase, has not been subjected to abuse, misuse, neglect or damage, has not been modified or repaired without the approval of Arlec and has not been used for commercial purposes ("Warranty").

If you wish to claim on the Warranty, you must, at your own expense, return the product, and provide proof of original purchase and your name, address and telephone number, to Arlec at the address below or the retailer from whom you originally purchased the product within 12 months from the date of purchase.

Arlec will (or authorise the retailer to) assess any claim you may make on the Warranty in the above manner and if, in Arlec's reasonable opinion, the Warranty applies, Arlec will at its own option and expense (or authorise the retailer to) replace the product with the same or similar product or repair the product and return it to you or refund the price you paid for the product. Arlec will bear its own expenses of doing those things, and you must bear any other expenses of claiming on the Warranty.

The Warranty is in addition to other rights and remedies you may have under a law in relation to the product to which the Warranty relates.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For all Sales & Warranty enquiries
Arlec Australia Pty. Ltd. ACN 009 322 105
("Arlec") gives the Warranty.

Building 3, 31 – 41 Joseph Street, Blackburn North, Victoria, 3130
Blackburn North LPO, P.O. Box 1065, Blackburn North, 3130

Customer Service: (03) 9982 5111
New Zealand Toll Free: 0800 003 329
Email: custservice@arlec.com.au

CPIN002158/5

USERMANUAL

FOR PERSONAL INDOOR USE ONLY

1850W FIREPLACE HEATER

WITH REALISTIC LOG FLAME EFFECT

EFH330

Samie

WARNING!

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR PERSONAL INJURY, READ, UNDERSTAND AND FOLLOW INSTRUCTIONS BEFORE USING THIS HEATER

KEEP THIS MANUAL IN A SAFE PLACE FOR FUTURE REFERENCE

IMPORTANT SAFEGUARDS

1. Read all instructions before using this heater.
2. This heater is hot when in use.
   To avoid burns, do not let bare skin touch hot surfaces.
   Use handles when moving this heater. Keep combustible material such as drapery and other furnishings, at least 1 metre from the heater.
   When in use keep the mains cord of the heater from touching the heater body. Do not drape the cord over the heater while hot..
   Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating unattended.
3. Always unplug heater when not in use.
4. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner.
   Return heater to suitably qualified facility for examination, electrical or mechanical adjustment or repair.
5. Do not use outdoors, the product is designed only for household use.
6. Never locate heater where it may fall into a bathtub or other water container.
7. Do not run cord under carpet.
   Do not cover cord with throw rugs runners, or the like. Keep cord away from traffic areas to avoid tripping over.
8. To disconnect heater, turn controls to off, then remove plug from outlet.
9. Connect to properly earthed socket-outlet of the appropriate voltage.
10. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
11. To prevent a possible fire, do not block the grilles in any manner.
12. Do not use in areas where petrol, paint, or flammable liquids are used or stored.
13. Use the heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury.
14. Do not connect via double adapters or power boards. Avoid the use of an extension cord because the extension cord may overheat and cause risk of fire. However, if this heater is used with an extension cord, use as short a cord as practical.
15. Do not use this appliance with a programmer, timer or any other device that switches the heater on automatically, since a fire risk exists if the appliance is covered or positioned incorrectly.
16. In order to avoid overheating, do not cover the heater.
17. To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this heater along with all packaging material and promotional labels.
18. Fully unwind the cord before first time use
19. There are no user serviceable parts in this heater; any maintenance other than cleaning should be performed by an authorised service representative.
20. The installation of a residual current device (safety switch) is recommended to provide additional safety protection using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying power to the appliance. See your electrician for professional advice.
21. Keep these instructions handy for future reference.

CAUTION

- **This heater is to be operated only in upright position.**
- **When the heater is not in use, store in a cool dry location.**
- **Do not store until the heater cools down.**

WARNING

- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
- Young Children should be supervised to ensure that they do not play with the appliance. **The heater must be positioned in such a way that there is at least 200mm from back wall.**
- The heater must not be located in front of socket outlet.
- Do not use this heater in the immediate surroundings of a bath, shower or swimming pool.

HELPFUL ADVICE BEFORE USE

- Please retain all packaging until you have checked and counted all the parts and the contents of the fixing pack against the parts list.
- The fixing pack contains small items which should be kept away from young children.
- We suggest that you open the fixing pack and place all the contents into a container, therefore reducing the risk of losing any small pieces.
- This appliance is heavy; two people are recommended for lifting

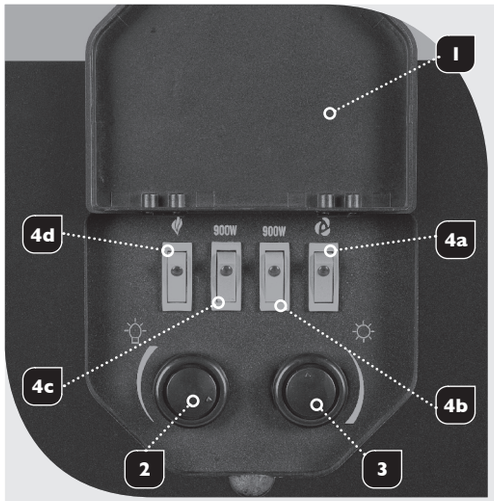

CONTROL PANEL

Control panel is located at the top of the appliance; lift the cover to assess to the control panel.

1) Control Panel Cover
2) Flame Adjustment Switch
3) Thermostat
4) Other Controls
   4a. Fan (without heating)
   4b. Heat 900W
   4c. Heat 900W
   4d. Flame Effect On/Off

OPERATING INSTRUCTIONS

Caution: There may be some odor coming from the heater for the very first time you use this heater. This is normal during the break-in period or after long term storage. Make sure the heater is in well ventilated area and continue running it until the smell goes away.

BEFORE FIRST USE

Remove all the packaging material along with any promotional material.

Unwind the cord to its full length and place the heater on a firm level surface in a stable, upright position.

Visually inspect he air inlets and outlets to ensure that there are no blockages.

1. Insert Plug Into Socket
2. Open the control panel cover(1)
3. Select the desired function:
   - Flame effect On/Off (4d)
   - Fan (4a-Figure 1) (without heating)
   - Low heat 900w (4a + 4b or 4a + 4c -Figure 1)
   - Full heater 1800w (4a + 4b + 4c-Figure 1)
   - Heat and Flame effect (4a + 4b + 4c + 4d-Figure 1)
4. It is necessary to switch on the fan to activate heat functions.Without fan heating will not run.
5. Increase or decrease the flame effect by rotating the flame adjustment switch 2 (-Figure 1).
6. Rotate thermostat control (3--Figure 1), clockwise or anti-clockwise to achieve desired room temperature.

SAFETY CUT-OFF

- This appliance is fitted with a safety cut-off which will operate if the heater overheats (eg. due to blocked air vents). For safety reasons, the heater will NOT automatically reset.
- To reset the appliance, disconnect the appliance from the mains supply for at least 30 minutes. Reconnect the supply to the mains and switch on the appliance.

REPLACING THE FLAME EFFECT LIGHT BULB

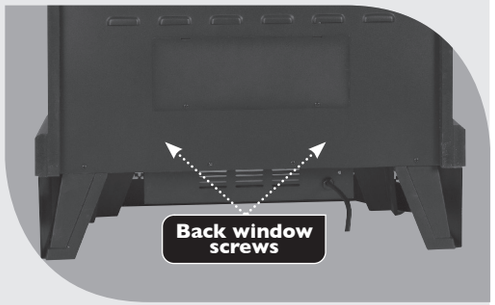

WARNING

Always disconnect the heater unit from the power supply before you attempt to replace the globes. The globes reach high temperature during operation. Give enough time for the globes to cool down.

1. Loosen the two screws at the back window of heater.
2. Lift up the back window and remove it.
3. Replace the bulb with a 25W candle bulb (See Figure 3).
4. To reassemble, follow the above instructions in reverse order.
5. Always unplug before replace the light bulbs.

EFFECTS MECHANISM